





EN Operating instructions. page 1
Original

SZ 415-1 for AZ/AZM 415-B30-01, -03, -06 and -08

Mounting inside, Door hinge on the right-hand side
AZ/AZM 415-B30-01 (with emergency handle)
AZ/AZM 415-B30-03

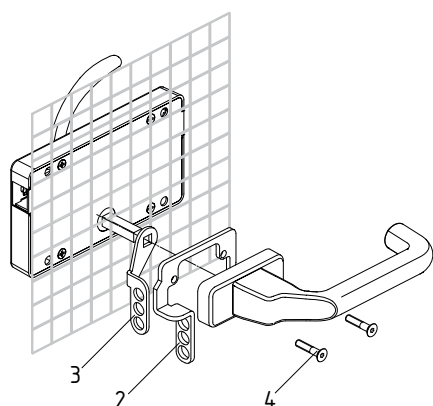


Mounting outside, Door hinge on the left-hand side
AZ/AZM 415-B30-06 (with emergency handle)
AZ/AZM 415-B30-08

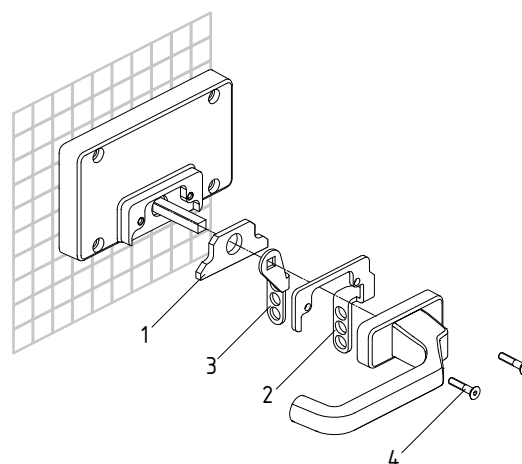


SZ 415-2 for AZ/AZM 415-B30-02, -04, -05 and -07

Mounting inside, Door hinge on the left-hand side
AZ/AZM 415-B30-02 (with emergency handle)
AZ/AZM 415-B30-04

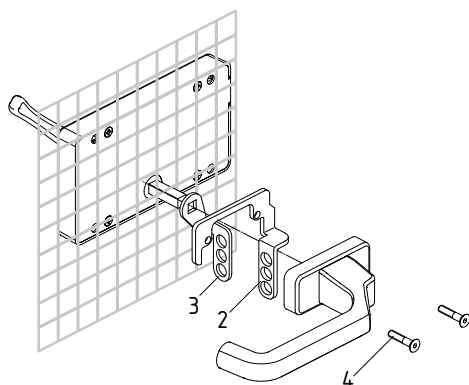

Mounting outside, Door hinge on the right-hand side
AZ/AZM 415-B30-05 (with emergency handle)
AZ/AZM 415-B30-07

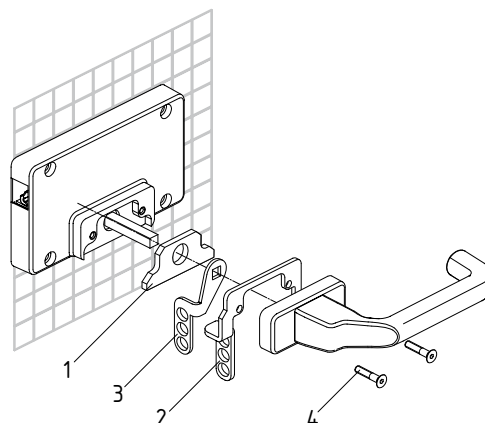

Included in delivery

- 1 Spacer
- 2 Lockout plate
- 3 Lockout tag
- 4 Two hexagonal socket screws M 5 x 25

K. A. Schmersal GmbH & Co. KG

Mödinghofe 30, D - 42279 Wuppertal
Postfach 24 02 63, D - 42232 Wuppertal

Phone: +49 - (0)2 02 - 64 74 - 0
Telefax: +49 - (0)2 02 - 64 74 - 1 00
E-Mail: info@schmersal.com
Internet: <http://www.schmersal.com>

