SCHMERSAL

EN Operating instructions. . . . . page 1
Translation of the original operating instructions

MS AZM 161 R/P
Mounting right-angled to safety guard

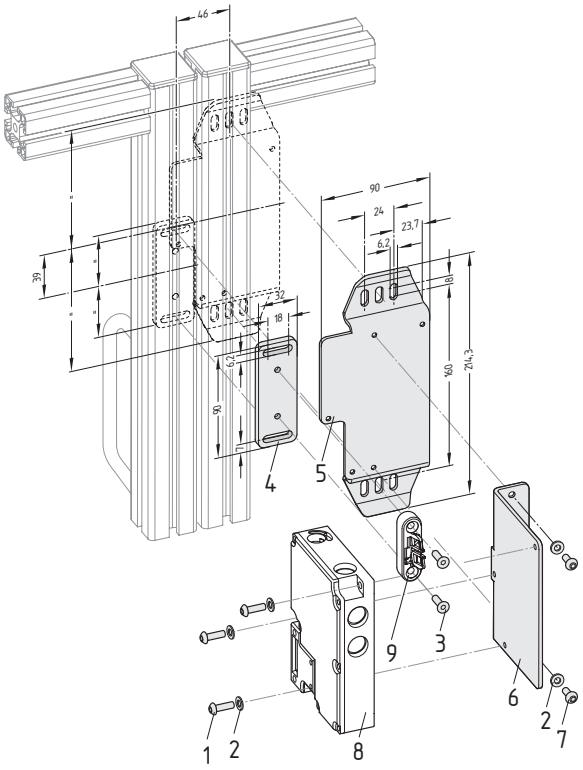

MS AZM 161 P
Mounting parallel to safety guard

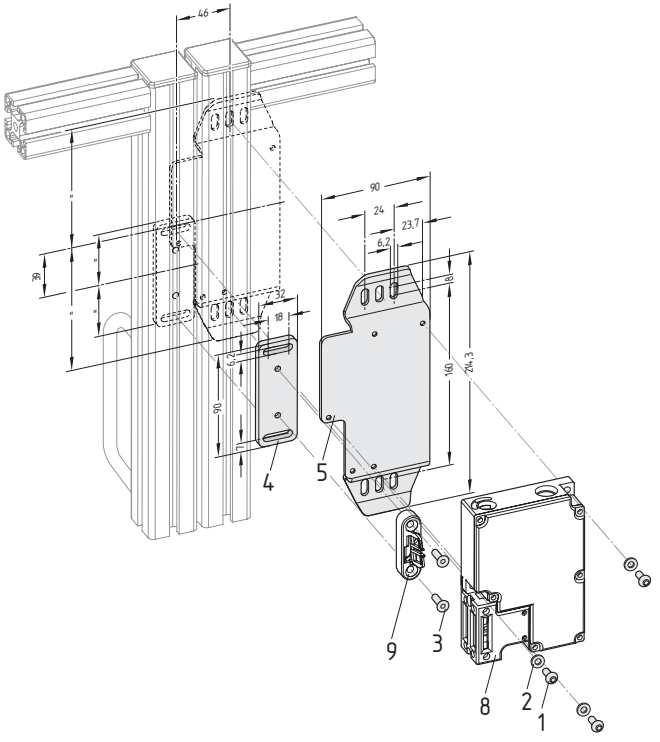

Key
1 Roundhead screw M5 x 16 to ISO 7380
2 Washer to DIN 125-5,3
3 Counter sunk screw M5 x 16 to DIN 7991
4 Mounting plate AZ 16/AZM 161
5 U-profile AZM 161
6 Mounting angle AZM 161
7 Roundhead screw M5 x 10 to ISO 7380

Not included in delivery
8 Solenoid interlock AZM 161
9 Actuator AZM 161-B6

⚠ The mounting sets can only be used in conjunction with actuator AZM 161-B6.

K. A. Schmersal GmbH & Co. KG
Möddinghofe 30, D - 42279 Wuppertal
Postfach 24 02 63, D - 42232 Wuppertal

Phone: +49 - (0)2 02 - 64 74 - 0
Telefax: +49 - (0)2 02 - 64 74 - 1 00
E-Mail: info@schmersal.com
Internet: http://www.schmersal.com

x.000 / 09.2015 / v.A. - 101149335-EN / C / 2015-09-14 / AE-Nr. 5175